

## Juicer

**96700 & 1G96700**

Operation Manual

## Pressoir à jus

**96700 & 1G96700**

Manuel d'utilisation

## Extractor de jugos

**96700 & 1G96700**

Manual de operación

# Juicer Safety

**IMPORTANT:** This operation manual should be reviewed with all equipment operators as part of your operator training program.

## Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING." These words mean:

**! DANGER**

You will be killed or seriously injured if you don't follow instructions.

**! WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## ! WARNING



### Electrical Shock Hazard

This appliance must be earthed.

Plug into a grounded outlet.

Do not remove ground.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

## Requesting Assistance or Service

Before calling for assistance or service, please check the "Troubleshooting Guide" in this manual. If you still need help, follow the instructions below.

Whenever you call to request assistance or service, you need to know the complete model number. You can find this information on the label on the bottom of your appliance.

Please also record the purchase date of your equipment and your dealer's name, address, and telephone number.

Model Number \_\_\_\_\_

Purchase Date \_\_\_\_\_

Dealer Name \_\_\_\_\_

Dealer Address \_\_\_\_\_

Dealer Phone \_\_\_\_\_

You can also order **replacement parts** by calling your nearest Hamilton Beach Commercial Service Center or your local dealer.

**Call our technical service number: 1-866-285-1087 or 1-910-692-2223**

8 a.m. – 5:00 p.m. EST Monday – Friday  
([www.commercial.hamiltonbeach.com](http://www.commercial.hamiltonbeach.com))



## **IMPORTANT SAFETY INSTRUCTIONS**

**WARNING** — When using electrical appliances basic safety precautions should be followed, including the following:

- Read all instructions.
- Plug into a grounded outlet.
- Do not use an adapter.
- Do not use an extension cord.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- To protect against electric shock, do not immerse cords, plugs, or the juicer base in water or any other liquid.
- To reduce risk of personal injury, unplug cord from outlet when not in use, and before putting on or taking off parts or doing any other servicing of the juicer.
- Do not use appliance for other than intended use.
- Avoid contacting moving parts.
- Do not store any kitchen utensils in the bowl. The juicer would be damaged if inadvertently turned on.
- Close supervision is necessary when any appliance is used by or near children.
- Inspect reamer daily. Check for cracks, nicks, or broken ribs.
- Do not use outdoors.
- Do not place in or near water or liquids.
- To reduce risk of personal injury and to prevent damage to the juicer, do not insert utensils into the reamer while operating the juicer.
- The use of accessory attachments not recommended by Hamilton Beach may cause injuries.
- To prevent damage, DO NOT move or shake the juicer while in operation. If juicer action stops during operation, turn juicer OFF and reset unit.
- Do not spray the base with a high-pressure spray gun.
- Disconnect power before cleaning or servicing.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- If the supply cord of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. If fitted with a non-rewirable U.K. plug, the 13 amp fuse approved by ASTA to be B.S. 1362 must be used. If you need a replacement fuse carrier, it must be replaced by the same colour coded carrier with the same markings. Fuse covers and carriers can be obtained from approved service agents.

**IMPORTANT:** If the molded plug is cut off, dispose of it immediately. The plug is not rewirable and would cause a shock hazard if inserted into a socket.

**– SAVE THESE INSTRUCTIONS –**


## **Juicer Operation — Quick Start Guide**

1. Place the juicer on a dry, level surface.
2. Install the appropriate reamer in the juicer and place a container under the juice spout.
3. Make sure the power switch is in the "off" or **O** position. Plug the juicer into a grounded electrical outlet.
4. Move the power switch to the "on" or **I** position.
5. Hold the fruit half firmly against the reamer.

# Parts and Features

The parts and features for the 96700 and 1G96700 juicer are shown on this page. Become familiar with all parts and features before using your juicer. Page references are included next to some features. Refer to those pages for more information about the feature.

For questions, call Technical Service at 1-866-285-1087 or visit our web site at:  
([www.commercial.hamiltonbeach.com](http://www.commercial.hamiltonbeach.com))

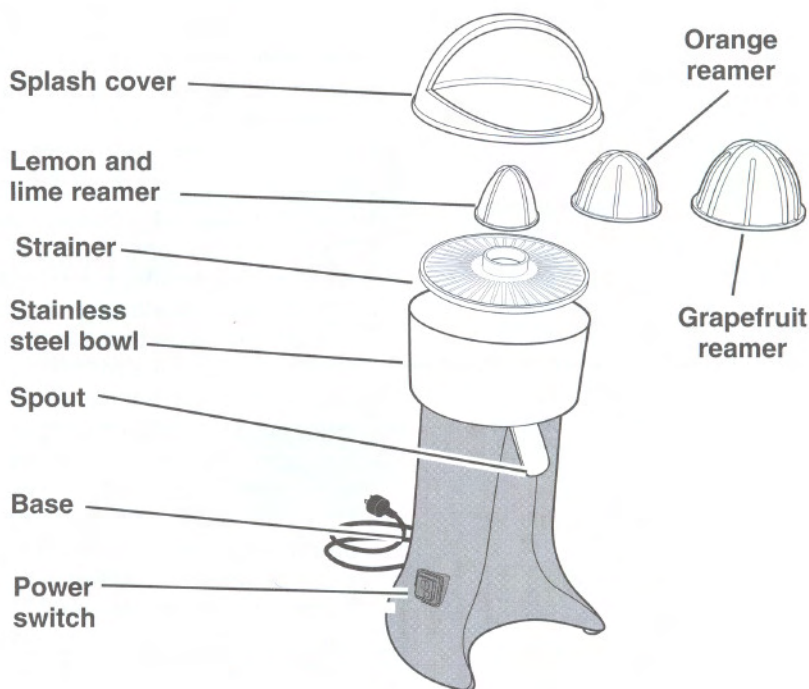


Refer to the following "Power Requirements" section before plugging in your juicer.


## Power Requirements

Use a fused electric outlet for the juicer. Depending on the model of your juicer, use one of the following for power requirements:

Model 96700  
120 VAC, 60Hz

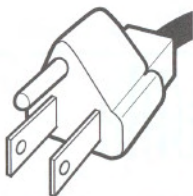

Model 1G96700  
230 VAC, 50Hz

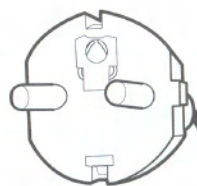

**NOTE:** The juicer contains an automatic thermal cutout that will shut the juicer off if the motor is stalled for a period of time. If the motor stops operating, push the power switch to the off position, unplug the unit, and allow the unit to cool. The thermal cutout will automatically reset when the unit has cooled. If the unit fails to operate after cooling, refer to the "Product Warranty."



# Operating the Juicer

## ⚠ WARNING



### Electrical Shock Hazard


Plug into a grounded outlet.  
Do not remove ground.  
Do not use an adapter.  
Do not use an extension cord.  
Failure to follow these instructions can result in death, fire, or electrical shock.

## Preparing the Juicer

Before using the juicer for the first time, refer to the "Cleaning the Juicer" section to wash all parts. Then complete the following steps to prepare the juicer each time you use it:

**NOTE:** Each time you use the juicer, always make sure there are no cracks in either the strainer or reamer.

1. Check to see that the strainer and spout are not plugged with pulp or seeds from the last use. Then place the stainless steel bowl onto the base.
2. Insert the strainer into the stainless steel bowl over the motor shaft.
3. Select the proper size reamer. Use the large reamer for grapefruit, the medium reamer for oranges, or the small reamer for lemons and

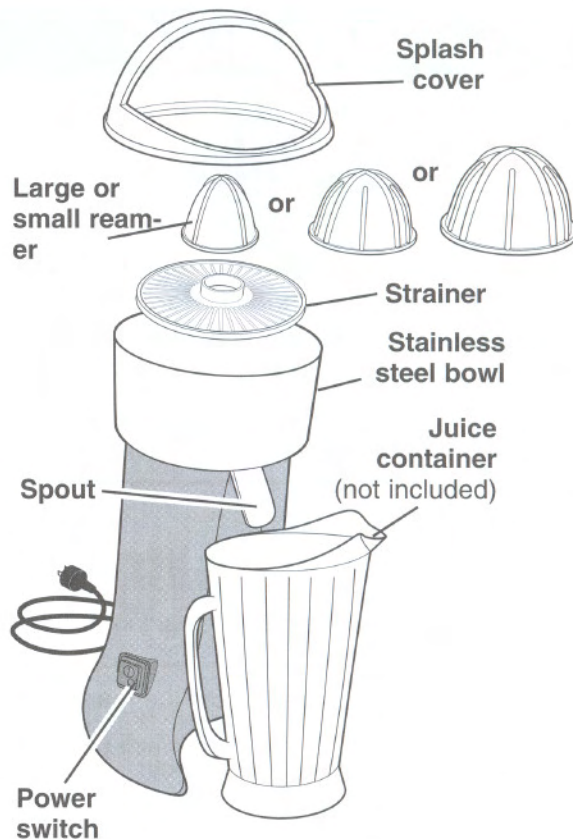

limes. Push the reamer all the way down onto the motor shaft.

4. Place the splash cover onto the top of the container.
5. Plug the juicer into an electric outlet.

## Making Juice

Make sure the fruit is at room temperature.


1. Prepare all the fruit ahead of time by cutting the fruit in half. This will make the juicing process quicker.
2. Push the power switch to the I (on) position and the reamer will begin spinning.

### NOTES:

- When completing the following steps, do not place fruit onto reamer with unit off.
- When placing the fruit onto the reamer, make sure your hand touches only the fruit and does not come in contact with the reamer.

3. Ream the fruit halves as follows:

- Place the fruit half inside the splash guard, centered over the reamer and apply downward pressure to force the fruit onto the reamer.
- Ream the fruit until all the juice is removed. Then remove the fruit and repeat process with the remaining fruit halves.

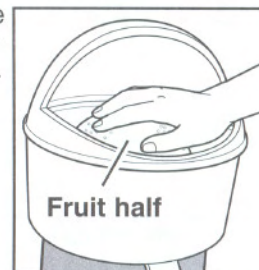

4. When all fruit halves are reamed, push the power switch to the I (off) position.

# Cleaning the Juicer

## ⚠ WARNING



### Electrical Shock Hazard

Disconnect power before cleaning.  
Replace all parts before operating.  
Failure to follow these instructions can result in death, fire, or electrical shock.


### Partial Cleaning

The juicer should be cleaned frequently between operations. Do not allow juice to dry on juicer parts. To give the juicer a partial cleaning:

1. Unplug the juicer.
2. Remove all pulp and seeds from the reamer, strainer, and stainless steel bowl.
3. Wipe all parts with a clean damp cloth.

### Full Cleaning

1. Unplug the juicer.
2. Remove the following parts from base:
  - Remove the splash cover, reamer, strainer, and bowl.
3. Remove all pulp and seeds from the removed parts.

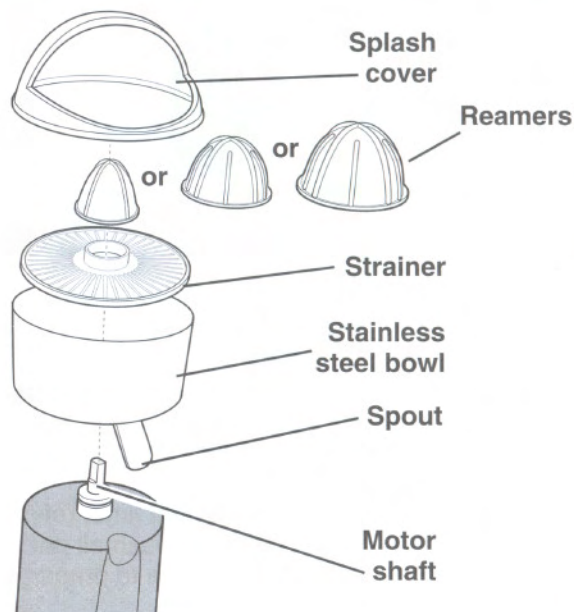

4. All the removed parts may be washed in a commercial dishwasher or hand washed using warm water (120 °F) and liquid detergent.
5. Wipe the base, motor shaft, and splash cover with a clean, soft cloth and a mild, non-abrasive detergent.  
**NOTE:** Do not wash the base in a sink, or spray water on it.
6. Reassemble the juicer in the reverse order.

# Troubleshooting Guide

Problem . . .	Solution . . .
Juice will not flow through container spout	<ul style="list-style-type: none"> <li>• Check to see if the strainer or spout is plugged with seeds or pulp from the last use.</li> </ul>
Juicer will not ream fruit	<ul style="list-style-type: none"> <li>• Make sure enough pressure is applied to the fruit during operation.</li> <li>• Make sure the reamer is pushed all the way down onto the motor shaft.</li> </ul>
Motor will not run	<ul style="list-style-type: none"> <li>• Motor has stalled and/or motor cutout switch has opened. Unplug the juicer and allow the unit to cool.</li> <li>• Make sure excessive pressure is not applied to fruit during operation.</li> <li>• Make sure juicer is securely plugged into outlet and power switch is fully depressed in the On position.</li> </ul>
Juice has bitter taste; rind in juice	<ul style="list-style-type: none"> <li>• Make sure excessive pressure is not applied to fruit during operation.</li> </ul>



# Replacement Parts

The following parts are available from Hamilton Beach. See "Requesting Assistance or Service" on page 2 for ordering.

Part Description . . .	Part Number . . .
96700 Lemon/lime reamer	596700
96700 Orange reamer	596701
96700 Grapefruit reamer	596702
96700 Strainer	596703
96700 Stainless steel bowl	596704
96700 Splash cover	596705

## Product Warranty

This product is warranted to be free from defects in material and workmanship for a period of two (2) years from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost to you.

THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED.

There is no warranty with respect to the following, which may be supplied with this product: (motor brushes, container and cutter assembly, clutches, bristle brushes, funnel, stainless steel cup, agitators, carafes, etc.). This warranty extends only to the original purchaser and does not cover a defect resulting from abuse, misuse, neglect, unauthorized repair, or use not in conformity with the printed directions. Always use this product in the manner provided in the Operation Manual. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty please contact our **TECHNICAL SERVICE DEPARTMENT at 1-866-285-1087**. (For faster service please have model, series, and type numbers ready for operator to assist you.) Reasonable proof of the date of purchase must be presented; otherwise, the effective date of the warranty will be based upon the date of manufacture plus ninety (90) days.

Hamilton Beach/Proctor-Silex, Inc.  
Commercial Customer Service  
263 Yadkin Road  
Southern Pines, NC 28387

1/03